

EA660 4-Slot Terminal & 4-Slot Battery Charging Cradle



Quick Start Guide

V1.0

► Package

Please make sure the following contents are in the EA660 4-Slot Terminal and 4-Slot Battery Charging Cradle gift box. If something is missing or damaged, please contact your Unitech representative.

► The Package Contents

- EA660 4-Slot Terminal and 4-Slot Battery Charging Cradle (with Detachable Part)
- Power Supply (12V/5A)

► Optional Accessories

- Power Cord (US) (PN#1010-601551G)
- Power Cord (EU) (PN#1550-602333G)
- Power Cord (UK) (PN#1550-602689G)

► Product View

Front view

Battery
Charging
LED

Power LED



Rear view

DC Port




► Getting Started

There are two options to charge EA660 terminal:

1. Default: Charge EA660 w/ or w/o hand strap directly
2. Charge EA660 with the boot case or gun grip after removing the detachable cover.


► How to Install the Detachable Part

Insert the detachable cover into the cradle until you hear a "CLICK" sound.

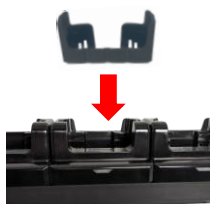

► How to Remove the Detachable Part

Use your thumb to press against both ends of the detachable part and remove it upwards.

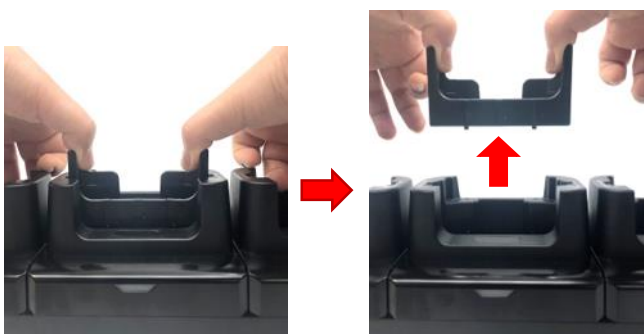

► How to Charge EA660 Battery

Place the battery into the charger (with the model name and battery strap facing left), and the charger will detect the presence of batteries and initiate charging (LED-red light). If no detection occurs, no light will be displayed.



► Checking the LED status

Power LED	Description
Green LED	Power On
LED Off	Power Off
Battery Charging Status LED	Description
Solid Red Light	Battery Is Being Charged
Solid Green Light	Battery Fully Charged
LED Off	No Battery Detection Occurs

Note:

1. The Ethernet Status LED is specific to the 5-Slot Ethernet Cradle version. As this manual pertains to the charging-only version, this LED will not illuminate.
2. When the EA660 is placed in the cradle, the Status LED indicator on the front of the cradle will not illuminate. For charging status of the EA660 is on itself.

► Charging the EA660 and Battery

We highly recommend using the adapter provided in the EA660 4-Slot Terminal and 4-Slot Battery Charging Cradle package.



WARNING!

There is a risk of fire and burns if the cradle is used improperly.
DO NOT disassemble, crush, puncture, short external contacts, or dispose the cradle in fire or water.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

DO charge between 20% and 80% to protect your battery.
Avoid full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.



<http://www.ute.com/>