

HT330 Single Slot Cradle



Quick Start Guide

V1.3

► Package

Please make sure the following contents are in the HT330 gift box. If something is missing or damaged, please contact your Unitech representative.

► The Package Contents

- HT330 Single Slot Cradle (with detachable cover)
- 12V/2A Adaptor for Cradle (P/N# 1010-900052G)

► Optional Accessories

- 3 Pins Power Cord (US) for Cradle (P/N# 1010-601551G)
- 3 Pins Power Cord (EU) for Cradle (P/N# 1550-602333G)
- 3 Pins Power Cord (UK) for Cradle (P/N# 1550-602689G)

► How to Use HT330 Single Slot Cradle

There are two options to charge HT330 terminal:

1. Charge HT330 without the boot case after installing the detachable cover.
2. Please remove the detachable cover before charging under the following conditions:

Charge HT330 with Boot Case on



Charge HT330 with Gun Grip



► How to Remove the detachable cover

Bend the both groove of the detachable cover inward, then grab on both sides of the detachable cover and slide upward to unhook detachable cover from cradle.



► How to Install the detachable cover

Insert the detachable cover until you hear a click sound. Make sure the arrows of the detachable Part matches with arrows of the cradle.



▶ Product View

■ HT330 Single Slot Cradle

HT330 Single Slot Charging Cradle (5000-900098G)	HT330 Single Slot USB Cradle (5000-900099G)
	

▶ LED Indicator Status



LED type	LED Status	Description
Power LED	Blue light	Power on
	LED off	Power off
Battery Charging Status LED	Red light	Battery Charging
	LED off	Battery fully charged

▶ HT330 single slot Charging/USB cradle Comparison

P/N	Models	Description	Rear View
5000-900098G	HT330 1-Slot Charging Cradle with spare Battery Slot	■ Charging terminal via DC jack	
5000-900099G	HT330 1-Slot USB Cradle with spare Battery Slot	■ Charging terminal via DC jack ■ Data transfer by USB type-C between terminal and PC	

CAUTION!

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.



<http://www.ute.com/>