



MS836

1D Handheld Laser Scanner

Charging

To get started with MS836, please connect USB cable to the USB port of a host PC.



Buzzer Description

- One short low beep: Power on/ USB Connection success
- One short high beep: Barcode Good Read
- Two long beeps: Entering Setting Mode
- One long high beep and one long low beep: Exit Setting Mode
- Three short high beeps: Setting Failed
- High and Low Beeps: Data Upload Complete

LED Description

Red Light On

- Scanner is in Standby Mode
- Data Send Complete

Red Light Quick Flash

- Scanner is in Update Mode

Green Light

- Barcode Good Read
- Data Send Complete

System Reset

Factory Default



Software Decoder Version



Enter/Exit Setup

Enter Setup



Exit Setup



*Please scan the "Enter Setup" to enter the setup mode. To exit the setup mode, scan the "Exit Setup".

USB Interface Mode

Auto*



USB-HID



Operation Mode

Testing Mode



Manual Mode *



Continuous Scan (LED always On)



Continuous Scan (LED Flashing)



Beeper Control

Medium *



Low



High



Data Terminator

CR *



Space



LF



None



TAB



HID Keyboard Case

Normal Letter Case *



All Upper Case



All Lower Case



Case Inversion



Language Settings

USA *



UK



German



France



Italy



Spain



Universal



Turkey-Q



Denmark



Japan

