




MS838B
2.4G Wireless
2D Barcode Scanner


Charging

Plug the USB Type-C cable into the port on the scanner and into a USB port on the host computer.

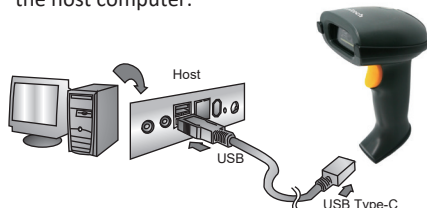

Connect Dongle To Host

Plug the USB Dongle to a free USB port of a host computer. The MS838B is now ready to use.

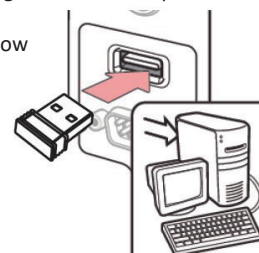

Test & Finish

Open a word processing program such as Microsoft Word or Notepad and scan the following barcode:



If the word "Unitech" appears on the screen, you have successfully installed your scanner.

Buzzer Description

- One long beep: Switch on
- One low beep and two high beeps: setup code or data saved.
- One short beep: pairing up with the receiver successfully.
- One short low beep and one short high beep: Good Read and data send.
- Three continuous short beeps: Alarm prompt

LED Description

Red Light

- Charging: Light on
- Charging finished: Light off

Green Light

- Slow flash: Bluetooth SPP/BLE pairing
- Light On: Scanner is connected to the receiver, USB or Bluetooth successfully.
- Quick Flash: Entering the pairing mode
- Flash once: Data upload successfully.

Default Setting

RF module Factory Default



Decoder Factory Default



1



2

Note: Please scan barcode 1 and barcode 2 to set Decoder factory default.

Wireless Communication Mode



Bluetooth HID



*2.4G Receiver



Bluetooth SPP

Note: The code with (*) is the factory default.

Pairing Function



2.4G Receiver pairing



Bluetooth HID pairing

Note: The scanner can be searched by other Bluetooth devices after scanning Bluetooth HID pairing code.

IOS show / hide the Keyboard



Show or hide

Note: Only support under Bluetooth mode

Battery Display



Display battery capacity

Note: Battery Percentage Display

Auto Sense Mode



*Off



On

USB Interface Mode



*USB-HID



USB-COM

Operation Mode



*Auto Mode



Batch Mode



Clear all data



Wedge Mode



Upload all data



Display stored data

Note: Scan the "Upload all data" code to complete the data transfer.

Note: Clear all data mode is only effective under Batch Mode.

— Beeper Control



Off



*High



Medium



Low

Note: The Off Code only turns off the short high beep of data send, the setting sound still exists.

— Auto Power Off After Idle



Immediate sleep



10 s



30 s



1 min



2 min



*5 min



10 min



30 min

Note:
The Auto Power Off time After Idle may have a ± 5 seconds gap.
The calculation method for Auto Power Off is from the release of the button to the shutdown of the scanner.

— Data Terminator



*CR



None



TAB



LF



CR/LF

Manufacturer:

Unitech Electronics Co., Ltd.

8F., No. 122, Lane 235, Baoqiao Rd.,
Xindian District, New Taipei City 231, Taiwan (R.O.C.)

EU Importer:

Unique Technology Europe B.V.

Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands

— Good Read Indicator



*Default beeps



One beep

— Language Settings



*USA



Germany



France



Italy



Canada



Spain



Brazil



Sweden



Portugal



Belgium



Turkey-F



Turkey-Q



Japan



Universal language

— Display Version



Software Decoder Version



Wireless Version



Build Time



<http://www.ute.com/>