

Single Slot Charging Cradle

-Support EA660 & EA530 Series-



Quick Start Guide

V1.1

► Package

Please make sure the following contents are in the Single Slot Charging Cradle gift box. If something is missing or damaged, please contact your Unitech representative.

► The Package Contents

- Single Slot Charging Cradle (Charging Only)
(with Detachable Cover)

► Getting Started

There are two options to charge EA660/EA530:

1. Default: Charge EA660/EA530 w/ or w/o hand strap directly
2. Charge EA660/EA530 with the boot case or gun grip after removing the detachable cover.

► Product View



❶ Power LED of Cradle

❷ Device Charging Slot

❸ USB-C Charging Port

The side with the LED side is the front side.


► Set Up and Charge EA660/EA530 With the Cradle

Please remove the **Detachable Cover** before charging under following conditions.

Charge EA660/EA530 with Boot Case	Charge EA660/EA530 with Gun Grip
	

► How to Remove the Detachable Cover

Grab the two edges on top of the detachable cover and bent inward, then hold and pull up the cover to remove it.

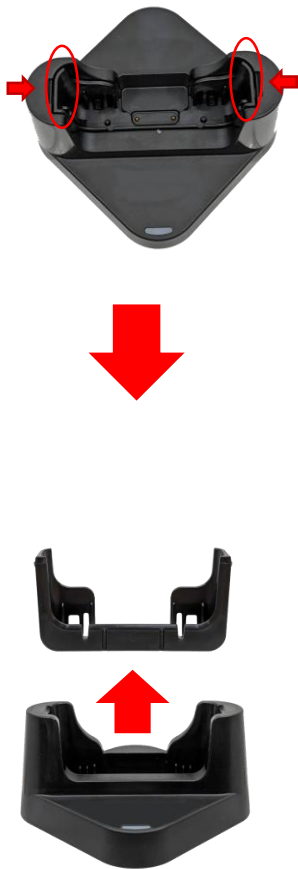

► How to Install the Detachable Cover

Insert the detachable cover into the cradle until you hear a “CLICK” sound.



► LED Indicator Status



Power LED of Cradle

LED Status	Description
Green LED	Cradle Power On
LED Off	Cradle Power Off

Note: The power status of the EA660/EA530 is on itself.

► Charging the EA660/EA530

We highly recommend using the original adapter. If you use a different adapter, please ensure that you follow the guidelines below before charging:

- a. Use a fast charging adapter.
- b. Recommended to use 15W adapter (or 15W above).
- c. Support 5V/3A, 9V/2A, and 12V/1.5A segment charging.

1. Insert one end of the USB-C cable into the charging port on the cradle, and plug the other end into a socket.
2. Please ensure the EA660/EA530 is installed securely and properly. When it is successfully connected, the cradle will begin fast charging using the cradle’s pogo pin.



WARNING!

There is a risk of fire and burns if the cradle is used improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose the cradle in fire or water.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

DO charge between 20% and 80% to protect your battery. **Avoid** full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.

