

Single Slot
USB / Ethernet Cradle
-Support EA660 & EA530 Series-



Quick Start Guide

V1.2

Package

Please make sure the following contents are in the gift box. If something is missing or damaged, please contact your Unitech representative.

The Package Contents

- Single Slot USB / Ethernet Cradle
(EA660 Detachable Cover Pre-installed)
- EA530 Detachable Cover x1

Getting Started

Before using the cradle, ensure that the correct detachable cover is installed for the device model.

Device	Detachable Cover
EA660	
EA530 Series	

USB and Ethernet Cradle Overview

Models	Front View	Rear View
Single Slot USB Cradle		 <ul style="list-style-type: none">1 USB-C Charging Port2 USB-C Port
Single Slot Ethernet Cradle		 <ul style="list-style-type: none">1 USB-C Charging Port2 Ethernet Connector3 USB Port4 USB-C Port

► Set Up and Charge the EA660/EA530 with the Cradle

Remove the **Detachable Cover** before charging the device in either of the following configurations:

Charge EA660/EA530 with Boot Case	Charge EA660/EA530 with Gun Grip
	

► How to Remove the Detachable Cover

Press both sides of the detachable cover inward, then lift the cover out of the cradle.



► How to Install the Detachable Cover

Insert the detachable cover into the cradle until you hear a **CLICK** sound.



► LED Indicator Status



Cradle Power LED

LED Status	Description
Green LED	Cradle Power On
LED Off	Cradle Power Off

Note: The device power status is shown on the EA660/EA530 Series itself.

► Charging the EA660/EA530 Series

We recommend using the original Unitech adapter. If you use a different adapter, please follow the guidelines below before charging:

- a. Use a fast-charging adapter.
- b. Use a 15 W or higher power adapter.
- c. The adapter should support 5V/3A, 9V/2A, or 12V/1.5A charging.



1. Insert one end of the USB-C cable into the charging port on the cradle, and plug the other end into a power outlet.
2. Insert the EA660/EA530 Series into the cradle. Ensure that the device is properly seated. Charging begins when the device makes proper contact with the cradle pogo pins.

CAUTION!

To ensure proper operation, keep all connectors free from contaminants such as dust, grease, mud, and water. Contamination may cause communication failure, short circuits, or overheating. If a connector is damaged, ensure it is fully repaired before using the unit to avoid a short circuit.

DO charge between 20% and 80% to protect your battery.
Avoid full discharges (0%) or continuous charging at 100% to reduce stress on the battery.

WARNING!

There is a risk of fire and burns if the battery is handled improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose of the battery pack in fire or water. **DO NOT** attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

EU Importer: Unique Technology Europe B.V.
Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands

