 


WD200 4-Slot Charging Cradle

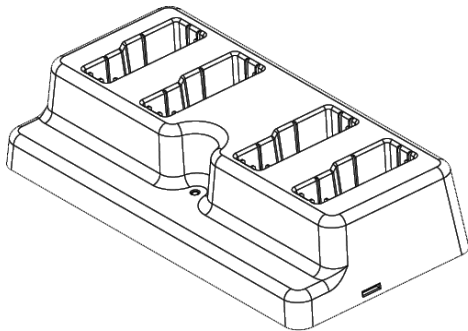 


Quick Start Guide

V1.0


► Power Connection

1. Plug the AC power cord into the power jack on the power adapter.
2. Plug the other end of the AC adapter into an electrical outlet.
3. Plug the power adapter cable into the DC-in port of the cradle.

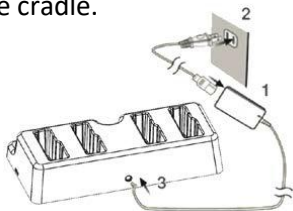

► Charging the Terminals

 1. Ensure the cradle is properly connected to a power source.
2. Slide the terminals into the cradle. Charging will start automatically once detected.

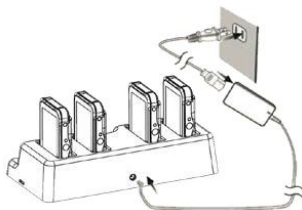

► Package

Please make sure the following contents are in the WD200 4-Slot Charging Cradle box. If something is missing or damaged, please contact your Unitech representative.

 
► The Package Contents

- WD200 4-Slot Charging Cradle
- Power Supply (5V/ 6A) without power cord

► Optional Accessories

- Power Cord (US / EU / UK)

► Getting Started

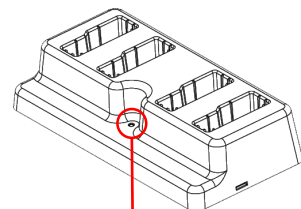

Power LED

► Checking the LED Status

Power LED	Description
Red Light	Power supply is connected

WARNING!

There is a risk of fire and burns if the battery is handled improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. **DO NOT** attempt to open or service the battery. Dispose used batteries according to local recycling guidelines in your area.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuit.

DO charge between 20% and 80% to protect your battery.

Avoid full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.

EU Importer:

Unique Technology Europe B.V.
Kapitein Hatterasstraat 19, 5015 BB, Tilburg,
the Netherlands

Copyright 2025 Unitech Electronics Co., Ltd.
All rights reserved. Unitech is a registered
trademark of Unitech Electronics Co., Ltd.



<http://www.ute.com/>