

MS652 Series

Single Slot Charging Cradles

-Support MS652 and MS652 Plus-



Single Slot Cradle with USB Cable




Single Slot Cradle with
Universal Power Adapter

Charging Instructions

Version 1.0

► How to Charge the Device

1. Connect the power adapter to the cradle, and then plug it into an electrical outlet. Alternatively, connect the cradle to a compatible USB power source using the supplied USB cable.

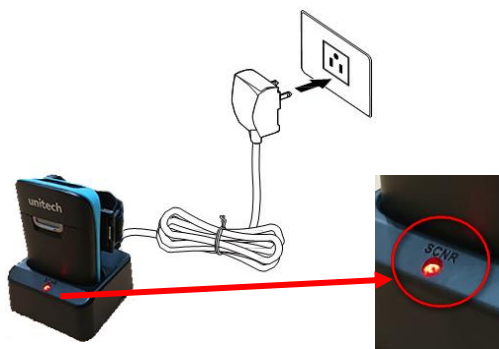

Note: Make sure the cradle is connected to a power source before checking the LED status.

► Checking the Battery Status

LED	Description
Solid Red	Charging
Off	Fully charged
<ul style="list-style-type: none"> ■ Power Input: 5 V DC, 3 A ■ Operating Temperature: 5°C to 45°C 	

WARNING! There is a risk of fire and burns if the battery is handled improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose of the battery pack in fire or water. **DO NOT** attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

NOTE! To ensure proper operation, keep all connectors free from contaminants such as dust, grease, mud, and water. Contamination may cause communication failure, short circuits, or overheating. If a connector is damaged, ensure it is fully repaired before using the unit to avoid a short circuit.

DO charge between 20% and 80% to protect your battery.

Avoid full discharges (0%) or continuous charging at 100% to reduce stress on the battery.